


# **For the Installation of a HOOSIER Inner-Liner Valve Stem**

**For Optimum Results: Install Stem, Across from Normal Valve Stem Hole**

**Measure 7/8 of an inch,  
Down from the  
Underside of the Wheel  
Lip and Mark it.**

***This valve stem requires a 21/64 drill bit  
and 1/8-27 NPT tap to install.  
When installing, go about 3/4 of the way  
through with the tap so the NPT threads  
will tighten up properly. Use thread  
sealer tape and tighten stem into wheel.***

**File: Flush with Wheel**

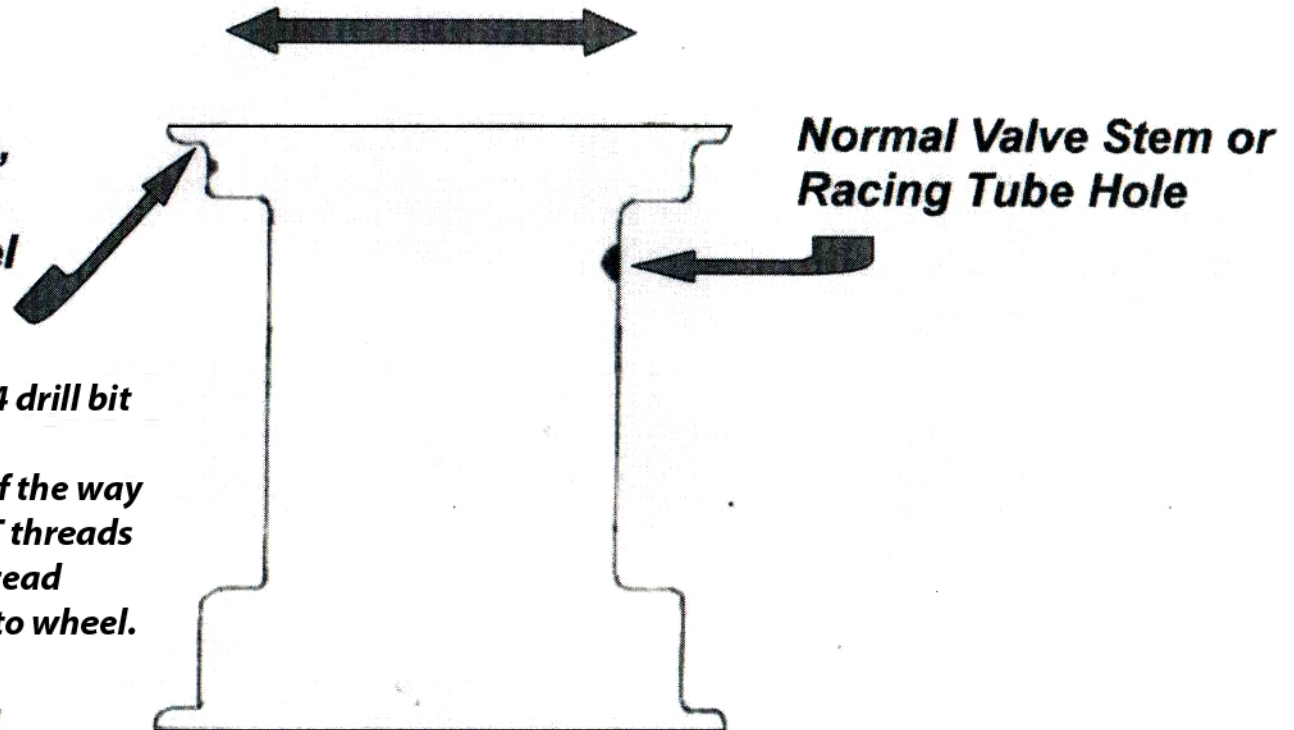

**Any Questions: Contact your HOOSIER  
Representative**